



KITCHEN ESSENTIAL

UNDER SINK FILTER INSTALLATION



1. Locate the cold water line **(1)**.

2. Turn OFF the cold water line by rotating the valve in the clockwise direction.

3. Switch ON your faucet's cold water LEVER to release pressure **(2)**.



4. Use a wrench to unscrew the cold water line **(3)**.

5. Connect the stainless steel female connector **(4)** (line labeled "IN") into the cold water valve.

6. Connect/screw in the black plastic male connector **(5)** (line labeled "OUT") into the existing cold water tubing.


7. Switch OFF your faucet's cold water LEVER **(2)**.

8. Turn ON the cold water line by rotating the valve in the counter-clockwise direction **(1)**.


9. Lastly, Turn ON your faucet's cold water LEVER **(2)**. Let the water run for about 10 minutes. It is normal to see grey/black (carbon) colored water flow out during the first few minutes.

**Optional: the system can be mounted via the screw holes. Screws not included.*

**Refrain from using hot unfiltered water with the filtered cold water supply for best results.*

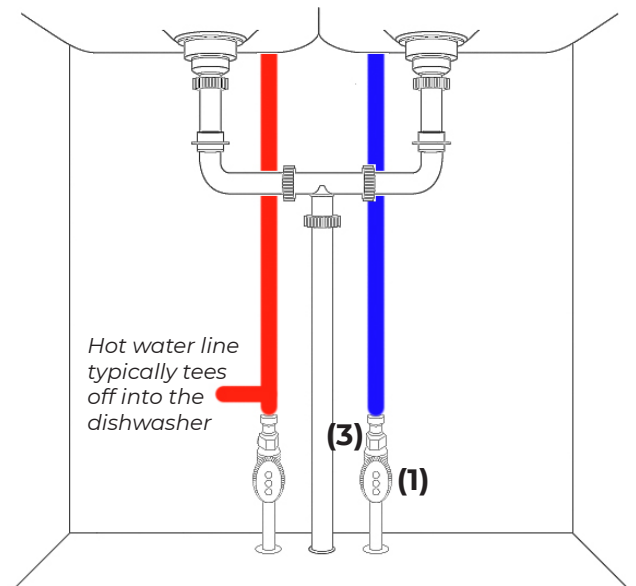

Typical Under Sink Setup

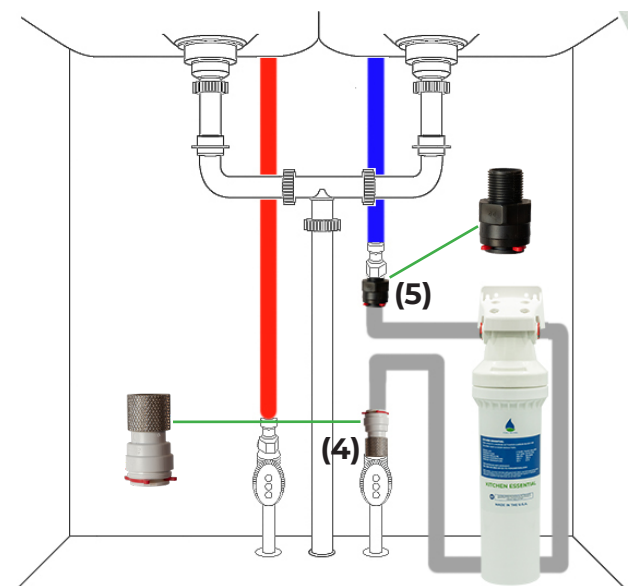

Completed Setup